




TECHNOLOGY CO.,LT

YY-W201

Item	Part Name	Q'TY	Remark
1.	Top Cover 1	1	0201-W2081-A
2.	Chassis	2	0203-W2101-A
3.	Power Suport	1	0211-W2102-A
4.	Spring (EMI)	52	0215-W2011-B
5.	120mm Fan	1	0612-00501-A
6.	Back Window	1	0209-540B1-A
7.	Back Plate	1	0222-W2101-A
8.	MB Palet Add	1	0211-W2101-A
9.	60mm Fan Cover	2	0219-A10B1-A
10.	Slot Shield	1	5506-54001-A
11.	Slot Bracket	7	0207-00061-A
12.	Screw #6-32	7	5401-54051-A
13.	MB Plane	1	0208-W2101-A
14.	Left Frame	1	0206-W2101-A
15.	Front Plate	1	0225-W2101-A
16.	Right Guide	8	0214-W2082-A
17.	FDD Braket	1	5532-00000-A
18.	Left Guide	8	0214-W2081-A
19.	Right frame	1	0206-W2102-A
20.	L Cover	1	0221-W2084-A
21.	5.25" EMI Cover	7	0221-W2082-A
22.	EMI Cover	1	0221-W2061-A
23.	Buzzer	1	0503-00701-A
24.	Buzzer holder	1	0316-00001-A
25.	Hooker	6	5512-00001-A
26.	Panel Led	1	0306-W2XX1-A
27.	Screw M3-HEX8MM	4	5401-15161-A
28.	Front Panel	1	0301-W20101-A
29.	Reset Knob	1	0305-W2010-A
30.	Power Knob	1	0303-W2010-A
31.	5.25" Cover	7	0311-W1010-A
32.	Screw	6	5401-31083-A
33.	Filter	1	5501-W2002-A
34.	C Pin	2	0385-W2001-A
35.	Door Led	1	0306-W2011-A
36.	Door	1	0308-W2012-A
37.	Power Spring	1	5407-05101-A
38.	Lock kit	1	0009-W2001-A
39.	Led Housing	6	0387-W1011-A
40.	PIN GU	1	0381-W2XX1-A
41.	led lens	1	0403-W2011-A
42.	Switch Holders	2	0316-W2XX1-A
43.	Power Switch	1	0401-00701-A
44.	Reset Switch	1	0402-00701-A
45.	Top Cover 2	1	0201-W2082-A
46.	Foot	4	5703-00002-A
47.	Side Cover	2	1202-W2081-A
48.	Handle	1	5507-W2001-A
49.	ATX I/O Shield	1	5005-00003
50.	Holder	2	0211-W2121-A
51.	Foot Holder	4	0314-W2002-A
52.	Hdd bracket	7	5521-W1A01-B
53.	USB bracket	1	0211-W2103-A
54.	60mm Fan	1	0606-34501

● Optional accessory

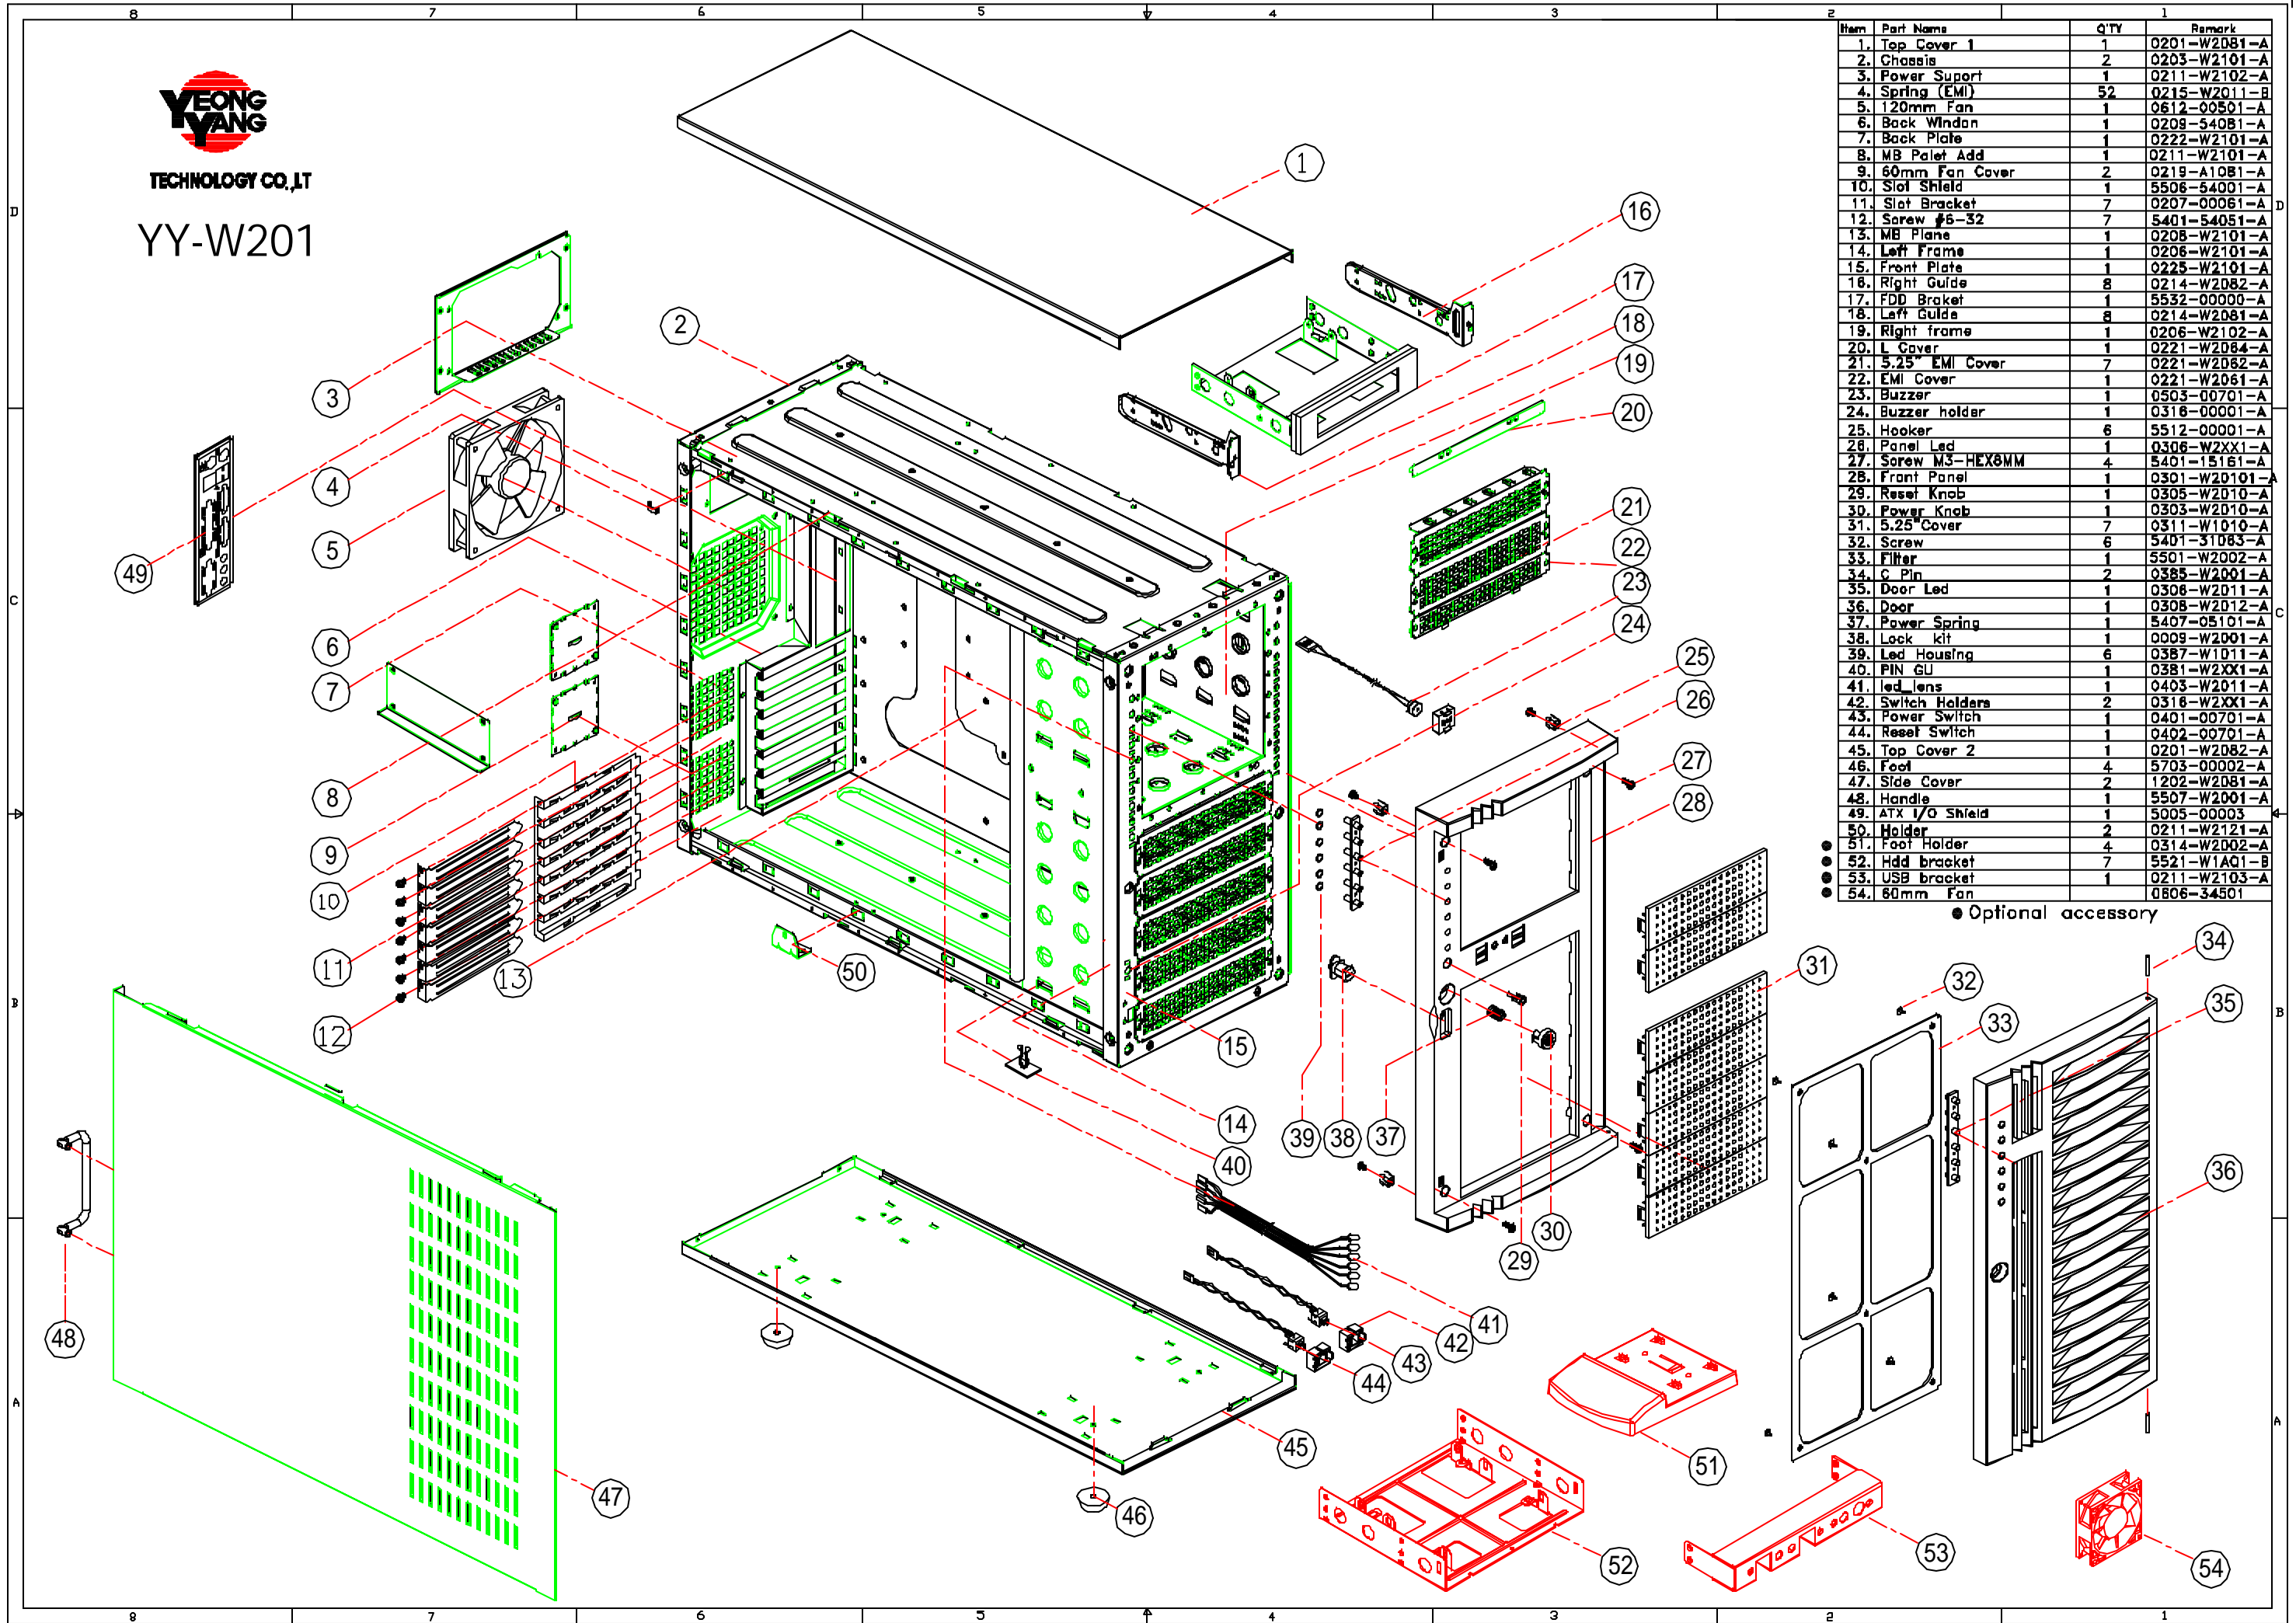



TECHNOLOGY CO.,LT

YY-W202

Item	Part Name	QTY	Remark
1.	COVER.TOP	1	0201-W2081
2.	CHSSAAS	1	0001-W2XX2
3.	PSU TRANSFER PLATE	1	0211-W2102
4.	120mm FAN	1	0612-R0702
5.	MB PALET ADD	1	0211-W2101
6.	60mm FAN COVER	2	0219-A1081
7.	SLOT SHIELD	1	5506-54001
8.	SLOT BRACKET	7	0207-00061
9.	SCREW #6-32	7	5401-54051
10.	RIGHT SLIDE	8	0214-W2082
11.	LEFT SLIDE	8	0214-W2081
12.	FDD BRACKET	1	0211-W2081
13.	L COVER	1	0221-W2084
14.	5.25" EMI COVER	7	0221-W2082
15.	EMI COVER	1	0221-W2081
16.	BUZZER	1	0503-00701
17.	BUZZER HOLDER	1	0316-00001
18.	SCREW	6	5401-31062
19.	HOOKERS	6	5512-00001
20.	SCREW #6-32	4	5401-15161
21.	PANEL ASSY	1	0002-W202A
22.	SCREW	6	5401-31063
23.	FILTER	1	5501-W2002
24.	C PIN	2	0385-W2001
25.	DOOR	1	0308-W2020
26.	KEY LOCK	1	0009-W2001
27.	LED HOUSING	6	0387-W1011
28.	PIN GU	1	0381-W2XX1
29.	LED CABLE	1	0403-W2E01
30.	SWITCH HOLDER	2	0316-W2XX1
31.	POWER SWITCH	1	0401-00701
32.	RESET SWITCH	1	0402-00701
33.	COVER.DOWN	1	0201-W2082
34.	FOOT	4	5703-00002
35.	SIDE COVER	2	0202-W2081
36.	HANDLE	1	5507-W2001
37.	HOLDER	2	0211-W2121
38.	FOOT HOLDER	4	0314-W2002
39.	HDD BRACKET	1	5521-W1A01
40.	USB BRACKET	1	0211-W2103
41.	60mm FAN	1	0606-34501

● Optional accessory

